

Kult Pro




DE	Gebrauchsanweisung Prduct Name	4	RO	Manual de utilizare Product Name	34
PL	Instrukcje obsługi Prduct Name	10	BG	Ръководство за употреба Product Name	40
CZ	Návod k obsluze Prduct Name	16	HR	Uputa za uporabu Product Name	46
SK	Návod na používanie Prduct Name	22	SL	Navodila za uporabo Produkt Name	52
HU	Használati utasítás Prduct Name	28			

Geräteaufbau



Bedienfeld

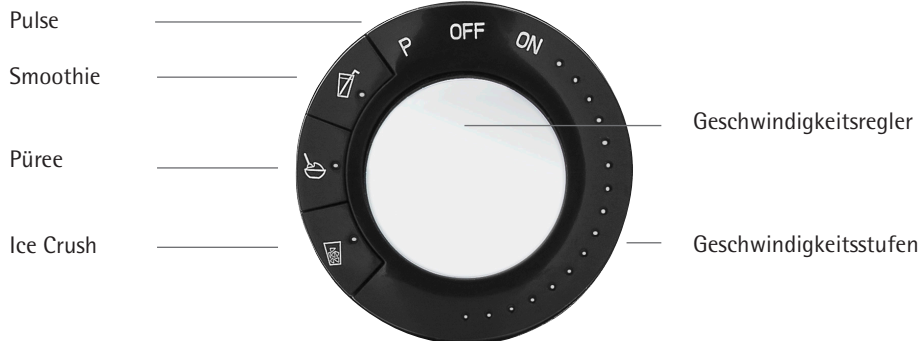

Important safety information

- Appliances can be used by persons with reduced physical, sensory or mental capacities or a lack of experience and/or knowledge if they are supervised or have been instructed on how to use the appliance safely and they understand the hazards involved.
- This appliance should not be used by children. The appliance and the power cord should be stored and operated out of reach of children.
- Children must not play with the appliance.
- It must not be cleaned or maintained by children without supervision.
- In the following situations, always switch off the appliance and unplug it from the mains before proceeding:
 - In the event of a malfunction
 - If the blades jam
 - During assembly and disassembly
 - When replacing parts or accessories
 - Before cleaning
 - When not being monitored
- If the appliance's power cord is damaged, it must be replaced by the manufacturer, its after-sales service or a similarly qualified person if hazards are to be avoided.
- Be careful of the sharp cutting blades during handling (danger of injury!) as well as when filling/emptying the container or when cleaning.
- Always pull the mains plug out of the socket before removing blocked ingredients.
- After using the appliance, clean all surfaces/parts which have come into contact with food. Please follow the instructions in the "Cleaning and care" section.
- Exercise caution when filling with hot liquids (max. 60°C!), which may be expelled from the appliance in the form of a sudden flash of steam. Only add hot liquids when the appliance is switched off!

- Always use the appliance in accordance with these instructions. Improper use may result in electric shocks or other hazards.
- Never place the mixing container on the motor unit or remove it while the appliance is switched on.
- This appliance is designed for use in households and similar environments, such as:
 - Staff kitchen areas in shops, offices and other commercial environments;
 - Farmhouses;
 - By guests at hotels, motels and other residential facilities;
 - At bed-and-breakfast establishments.

The appliance is not intended for purely commercial use.

Before use

The mixer may only be used for its intended purpose in accordance with these operating instructions. You are therefore advised to read the operating instructions carefully before use. They provide instructions for using, cleaning and caring for the appliance. We accept no liability for any damage caused if the instructions in this manual are not followed. Keep this instruction manual in a safe place and pass it on to any subsequent user together with the appliance. Please also note the warranty information at the end. The appliance is not intended for commercial use, only for the preparation of household quantities of food. The safety precautions must be observed during use.

Technical data

Rated voltage:	220-240V~ 50-60Hz
Power consumption:	1190-1400 W
Protection class:	II

Safety precautions

- Only connect the appliance to earthed wall sockets that have been installed in accordance with the regulations. The power cord and plug must be dry.
- Do not pull or clamp the connection cable over sharp edges. Do not leave it dangling. Protect it from heat and oil.
- Do not place the appliance on hot surfaces, such as on hotplates or similar areas, and do not operate near naked flames.
- Never pull the mains plug out of the socket by the cable or with wet hands.
- Do not switch on the appliance when the mixing container is empty.
- **Ensure that the blade unit is attached firmly and the lid is fastened correctly to the mixing container before using the appliance. Always operate the appliance with the lid closed. Always wait for the blades to come to a standstill before removing the lid and/or the mixing container.**

Always check that the lid is also connected at the discharge spout.

- The appliance must not be operated unsupervised.
- Never place objects into the mixing container whilst the appliance is running.
- **Do not reach into the jug before unplugging the appliance from the mains.**
- Always turn the selector to the "off" position ("O") before removing the mixing container.
- Do not fill the mixing container to beyond the MAX mark (hot foods should not be added beyond halfway to the MAX mark).
- Do not exceed the volumes and processing times listed in the relevant table.
- Never run the appliance for more than four minutes without interruption. Allow the appliance to cool down at room temperature before continuing.
- **Caution!** There is a risk of scalding when processing hot food. In extreme cases, the mixing container could become damaged. Only food with a maximum temperature of 60°C may be processed. When processing hot food or ingredients that could foam, do not fill the mixing container more than halfway to the top and hold the lid down firmly on the jug with your hand during operation.
- Care should be taken when handling the sharp cutting blades, emptying the jug and during cleaning.
- The appliance must be switched off and disconnected from the mains before accessories or additional parts that move during operation are replaced.
- Stop using the appliance and/or pull the mains plug out of the socket immediately if:
 - The appliance or power cord is damaged
 - you suspect that the device may be defective if it has fallen or similar incident.In such cases, arrange for the appliance to be repaired.
- **The blender may not be connected to an external switch, e.g. a timer or a circuit that regularly switches on and off.**
- Pull out the mains plug
 - if malfunctions occur during use
 - Before cleaning and care
 - After use.
- Do not immerse the drive unit in water.
- We accept no liability for any damage caused as a result of misuse, incorrect operation or improper repairs. Warranty payments are also excluded in such cases.
- The appliance is not intended for commercial use.

Use

The device is suitable for mixing and chopping foods such as fruit, vegetables and nuts as well as for preparing juices, smoothies and shakes.

The blender has three automatic programmes: Smoothie, Ice Crush and Puree for chopping ingredients finely. You can also set any of the 16 different speeds or use the pulse function.

Initial operation

Clean the mixing container, lid and closing cap prior to first use. Take care not to injure yourself on the sharp blade. Place the mixing container on the drive unit.

The handle must be facing to the right. The arrow markings on the lower part of the mixing container and the drive unit must be pointing towards one another. Add your ingredients. Note the maximum filling level on the mixing container. Filling past this amount may lead to overflowing, depending on the consistency of the ingredients. Close the mixing container using the lid and closing cap.

Warning: The mixer will only switch on if the mixing container and lid have been fitted correctly.



To this end, place the spout of the lid sideways against the pouring spout on the mixing container and gently press the lid onto the mixing container (1).

Then press the locking mechanism on the lid downwards until it clicks into place in the handle (2). A safety shutdown prevents operation without the jug and lid.

Turn the speed controller in a clockwise direction until the marker reaches the ON position. Turn the knob further to the right to set the desired speed. Sixteen different speeds can be set. To switch off, turn the knob in a counter-clockwise direction until the marker reaches OFF.


Turning the speed controller further to the left from the OFF position selects the pulse function. In this position, the motor does not run constantly, but switches off the moment you let go of the knob.

Once you have finished mixing, turn the speed controller to the OFF position.

Note: Switch off the appliance before detaching the mixing container from the drive unit or removing the lid from the mixing container.



Ice Crush

The Ice Crush button can be used for crushing ice cubes easily.

Insert up to 12 ice cubes (approx. 20x25mm) and close the mixing container using the lid and closing cap. Place the mixing container on the drive unit and turn the speed controller to the ON position. Now press the  Ice Crush programme button. The blender will start an automatic programme with different speeds and several pauses.



The programme ends automatically and the LEDs on all three buttons light up. You can end the programme at any time by pressing the Ice Crush button again or another button.

Smoothie

The  Smoothie programme can be used for preparing smoothies easily. Place the mixing container on the drive unit and turn the speed controller to the ON position. Press the  Smoothie programme button. The blender will start an automatic programme with different speeds.

The programme ends automatically after about one minute and the LEDs on all three buttons light up. You can end the programme at any time by pressing the Smoothie button again or another button.

Puree

Use the  Puree programme to puree ingredients. Place the mixing container on the drive unit and turn the speed controller to the ON position. Press the  Puree programme button. The blender will start an automatic programme with different speeds and several pauses. The programme ends automatically and the LEDs on all three buttons light up. You can end the programme at any time by pressing the Puree button again or another button.

Speed	Application	Maximum time
Low	Instant drinks, soft fruit and cocktails with alcohol	40-60 seconds
Low	Instant drinks, soft fruit and cocktails with alcohol	40-60 seconds
Low	Milkshakes	1-2 mins.
Medium	Soups, milkshakes with harder fruit, sauces, baby food, vegetables	1.5-2 mins.
High	Nuts, harder cheese, dry bread	40-60 seconds

Additional ingredients may be added by removing the closing cap, even while the motor is running.

Mixing container

The closing cap in the lid can be removed by turning it counter-clockwise and can then be used as a measuring cup (50ml).

The mixing container can be dismantled and the blades removed, especially for cleaning.



To do so, place the jar on a table with the opening facing downwards and rotate the locking base in a clockwise direction. You can now remove the blade unit and sealing ring.

To assemble, the sealing ring is first attached to the blade assembly.

When doing so, make sure the sealing ring is properly seated on the blade assembly. Place the locking base on the mixing container and turn it counter-clockwise as far as it will go.

Cleaning and care

Unplug from the mains after use. The drive unit should never be placed in water, only wiped down externally with a damp cloth. None

Never use abrasive cleaning agents. When cleaning the mixing container, be careful not to injure yourself on the sharp blades. Fill it with warm, soapy water immediately after use and allow the motor to run

for a few seconds. Then remove the mixing container and clean with it a washing-up brush.

Warning: The mixing container, blade unit and seal must not be placed in the dishwasher.



Aparatul respectă Directivele europene 2014/35/CE, 2014/30/CE și 2009/125/CE.

Conformity with EN60335 Clause 11 was checked by preparing the following recipe:
720g carrots + 300g potatoes + 180g onions + 600g water
Speed and duration: 30 seconds at max. speed



La sfârșitul duratei sale de viață, acest produs nu trebuie aruncat la coșul de gunoi menajer, ci trebuie adus la un punct de colectare pentru reciclarea aparatelor electrice și electronice.

Materialele sunt reciclabile în conformitate cu etichetarea lor. Reutilizarea, reciclarea și alte modalități de reutilizare a aparatelor vechi au o contribuție importantă pentru protejarea mediului înconjurător.

Vă rugăm să solicitați informații de la autoritățile dvs. locale cu privire la punctul corespunzător de eliminare.

Ne rezervăm dreptul de modificare